circuits provide a total signal division of 65,536. This takes HF signals which can be up to 30 Mhz, and changes them into a signal which can be read directly by microprocessor U1 to determine the operating frequency of the exciter. The signal information is sent to U1 on connector pin J1-4, "counter output".

4.6 RF OUTPUT PCB ASSEMBLY A4

Refer to schematic diagram figure 6-3 for the following discussion. Unless otherwise noted all components are prefixed A4.

The RF Output PCB Assembly consists of four relays and their support circuitry. The relays are used to switch various RF output functions such as coupler bypass and capacitor A1U1. Voltage input (+28 Vdc) for all of the relays is applied through connector J1, pin 7. The relays are activated by applying a ground through a transistor switch located externally to the A4 assembly.

Relay K1 is used to switch capacitors C1, C2, C3, C4, and C5. These capacitors form the shunt network for the coupler RF output. Ground to activate the relay is applied to

connector J7, pin 10. This ground is supplied from the Microprocessor PCB Assembly A1, connector A1J1-2.

Relay K2 is used to switch capacitors C6, and C7. These capacitors are series with the RF output forming a "T" network. Ground to activate the relay is applied to J1-9 and originates from A1J1-3.

Relay K3 is activated when the antenna coupler is in bypass mode. RF signal from assembly A3 is applied to terminals E1, and E2. This RF is then sent through K3 whose output goes directly to the antenna output terminal on the antenna coupler. Ground to activate the the relay is applied to J1-1, and originates from connector A3J2-9 on the RF input pcb assembly.

Relay K4 is activated anytime the antenna coupler is in its normal operating condition with tuning components in the RF path. Ground to activate relay K4 is applied to J1-8 and originates at connector A3J2-8. Circuitry on the RF input pcb assembly and microprocessor pcb assembly ensure that relays K4, and K3 will never be open or closed at the same time.

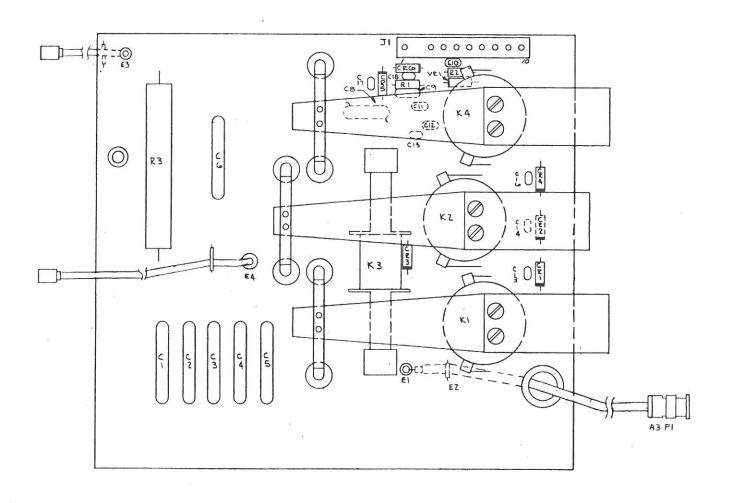


Figure 10-1. RF Output PCB Assembly A4, Component Locations

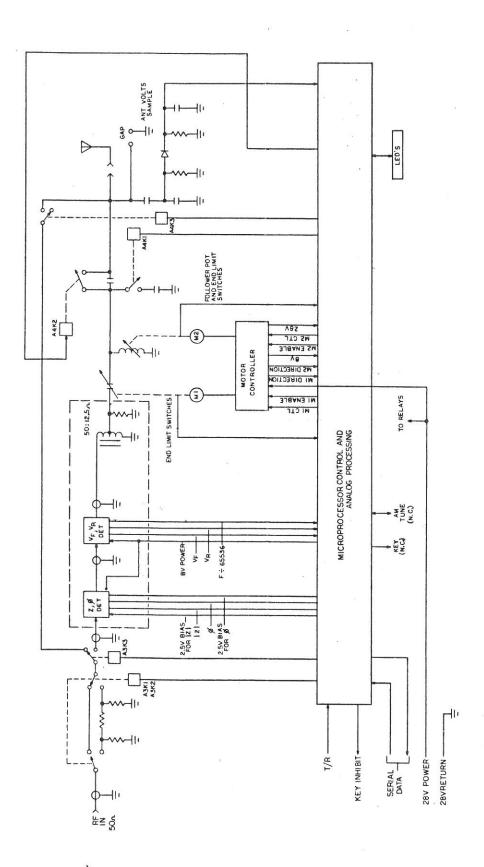


Figure 4-1. SR-680 Antenna Coupler, Block Diagram

CHAPTER 10

RF OUTPUT PCB ASSEMBLY A4

REF. DESIG.	DESCRIPTION	P/N
	RF OUTPUT PCB ASSY A4	680330
C1 C2 C3 C4 C5	Cap, cer, 100 pF, 5%, np0, 5 kV Cap, cer, 100 pF, 5%, np0, 5 kV Not used	C00040 C00040 C00040 C00040 C00040
C7 C8 C9 C10 C11 C12 C13 C14 C15 C16 C17 C18	Cap, cer, 4.7 pF, np0, 6 kV Cap, mica, 4700 pF, 5%, 500V Cap, cer, .01 uF, 20%, 50V	C00036 C06472 C10102 C10102 C10102 C10102 C10102 C10102 C10102 C10102 C10102 C10102

	\$ 15 miles	
	e g t	
	- a - a	
,		
	* *	
	п	
	2	

REF. DESIG.	DESCRIPTION	P/N
CR1 CR2 CR3 CR4 CR5 CR6	Diode, rect, 200V, 1A, 1N4003 Diode, rect, 200V, 1A, 1N4003 Diode, rect, 200V, 1A, 1N4003 Diode, rect, 200V, 1A, 1N4003 Diode, si, 1N4148 Diode, si, 1N4148	CR4003 CR4003 CR4003 CR4003 CR4148 CR4148
J1	Recept, 10 pin, m, pc	J00211
K1 K2 K3 K4	Clapper Assembly Clapper Assembly Relay, reed, 5 kV, 5A Clapper Assembly	680335-01 680335-02 K10026 680335-01
R1 R2 R3	Res, cc, 470 ohm, 5%, 1/4W Res, cc, 10K, 5%, 1/4W Res, hi-volt, 47 meg	R20471 R20103 R90010
VR1	Zener, 4.7V, 400 mV, 5%, 1N750A	CR7500