

MODEL 1519 CHANGER BASE
with
POWER SWITCH

The power switch on the 1519 changer base allows your amplifier to be turned off by the record changer when the last of a stack of records has been played.

To use, plug your amplifier's AC cord into the accessory outlet on the rear of the unit.

When the power switch is "on" and the amplifier's switch is also "on", amplifier power will be controlled by the record changers internal on-off switch.

When the power switch is "off" the amplifier's on-off switch controls the amplifier.

The illuminated power switch glows when the power switch (on front of base) is "on" and the changer's internal switch is also "on".

When changer shuts off after the last record has played, the light goes out and amplifier is turned off automatically.