

OPERATING INSTRUCTIONS

#710

AUTOMATIC HOT WATER AIR VENT **For Maximum Working Pressure of 30 PSI**

- 1) For normal automatic venting open vent screw 1 to 1 $\frac{1}{4}$ turns after installation.
 - 2) For quick manual venting open vent screw 2 to 2 $\frac{1}{2}$ turns. After venting close vent screw 1 to 1 $\frac{1}{4}$ turns.
 - 3) For complete shut off close vent screw.
-