


# INSTALLATION INSTRUCTIONS

1. Close door and lock.
2. Place lock in desired position at top or bottom of leading edge of moving (sliding) portion of door (enough to clear track by  $\frac{1}{16}$ ").
3. Mark, center punch and drill  $\frac{1}{8}$ " hole at top of lock body (highest of 3 holes for floor installation; lowest of 3 holes for ceiling installation).
4. Install 1 screw but do not fully tighten.
5. Tap locking bolt lightly with hammer to mark bolt hole position. Be sure drill will clear glass and mark center punch and drill  $\frac{3}{8}$ " hole for locking bolt.
6. With bolt in locked position, mark, center punch and drill  $\frac{1}{8}$ " holes for screws.

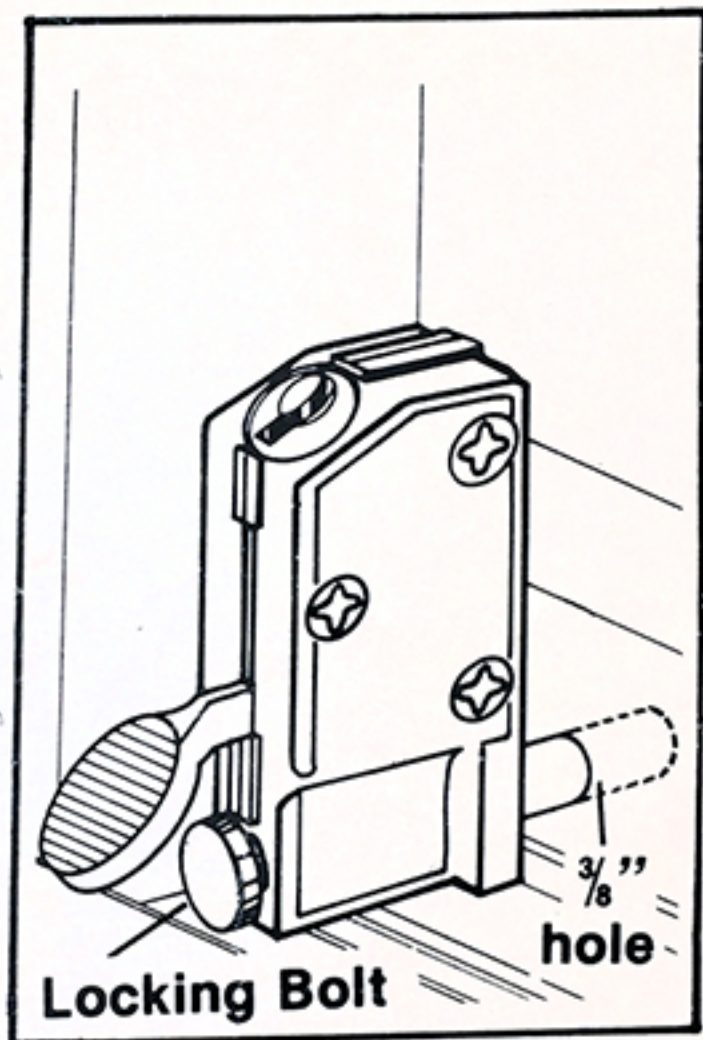

7. Install screws and tighten. Additional holes (on horizontal line with first hole) may be drilled to allow door to be locked in ventilating positions.

**Safety Tip:** always leave key in lock unless away from home.

A SUBSIDIARY OF

**EAC**

**IDEAL SECURITY HARDWARE CORPORATION**

215 EAST NINTH STREET, ST. PAUL, MINNESOTA 55101

MADE IN HONG KONG