

NEW 107-ADAPTOR

Now you can test 9-pin NOVARS, 12-pin COMPACTRONS,
new 10-pin tubes and NUUVISTORS on your

SECO 107 tester!

This new adaptor's compact 3½" x 2¾" x ¾" case fits neatly into your Model 107 cord compartment. It comes complete with 22-inch 12 wire cable all prepared and color-keyed for simple quick installation. Set-up data on new tubes is included.

107 — ADAPTOR — part no. 1171.....
Dealer net \$6.95



SECO ELECTRONICS Inc.


A SUBSIDIARY OF DI-ACRO CORP.

1201 SOUTH CLOVER DRIVE MINNEAPOLIS 20, MINNESOTA

INSTRUCTIONS

Just follow these 6 easy steps to install this adaptor on your Seco model 107 tube tester.

1. Remove the eight panel mounting wood screws.
2. Lift panel far as it will go and prop up in workable position with block.
3. Feed adaptor cable through cord compartment and under transformer — pull all slack under panel.
4. Connect colored leads to points shown in diagram.*
5. Pull cable slack back into cord compartment.
6. Dress cable along case wall and reassemble.

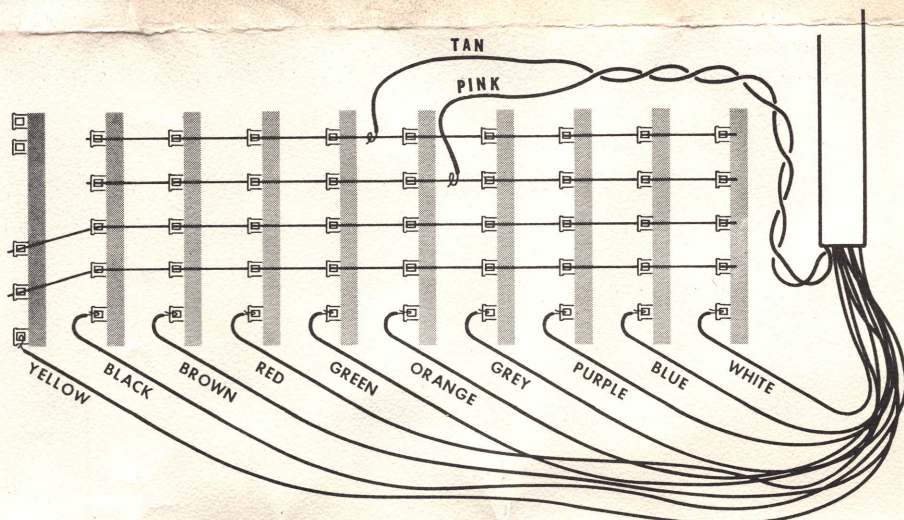

***SOLDERING PRECAUTIONS** — use utmost care and as little solder as necessary to keep it out of contacts — selector switch lugs are well tinned and solder flows easily. **DO NOT** overheat lugs.

NUVISTOR SOCKET ADAPTOR 1071N

Remove one of the spare sockets from the prewired panel (socket 8C) and install the adaptor by snapping into the open socket hole.

Secure tightly by bending back the tabs after orienting with the red wire towards the top of the panel.

Connect and solder wires to the proper colored pins of the socket directly below (socket 8E).

1071N — ADAPTOR.....Dealer net \$2.00

