
## **C320KGT AUXILIARY INTERLOCKS** (TOP MOUNTED TYPE)

## INSTALLATION INSTRUCTIONS

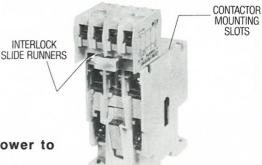

MOLINTING

- 1. Disconnect all power to contactor.
- 2. Align and engage side runners of auxiliary contact with the mounting slots of contactor as shown in Figure 1.
- 3. Slide auxiliary interlock onto contactor until the release latch engages detent of contactor, as shown in Figure 2.

NOTE: To remove auxiliary interlock, lift up on release latch and slip auxiliary interlock off contactor.



Figure 1



Figure 2